
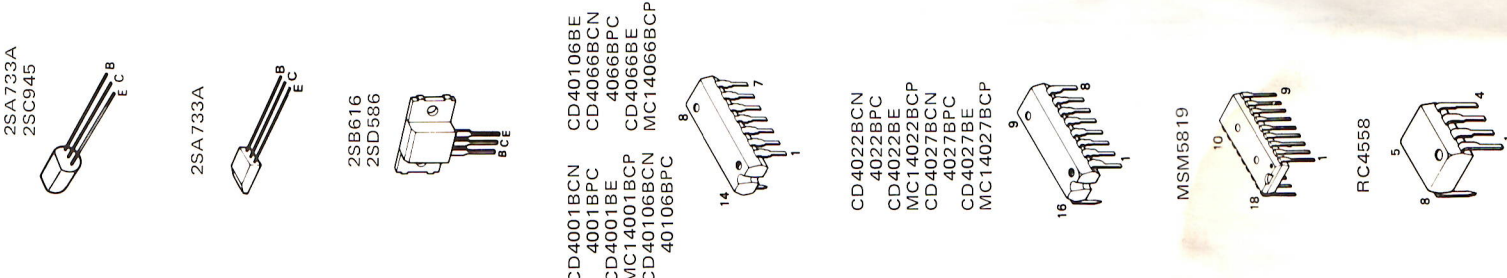


PC BOARD

▼ CONTROL (X29-1180-00) Components side view

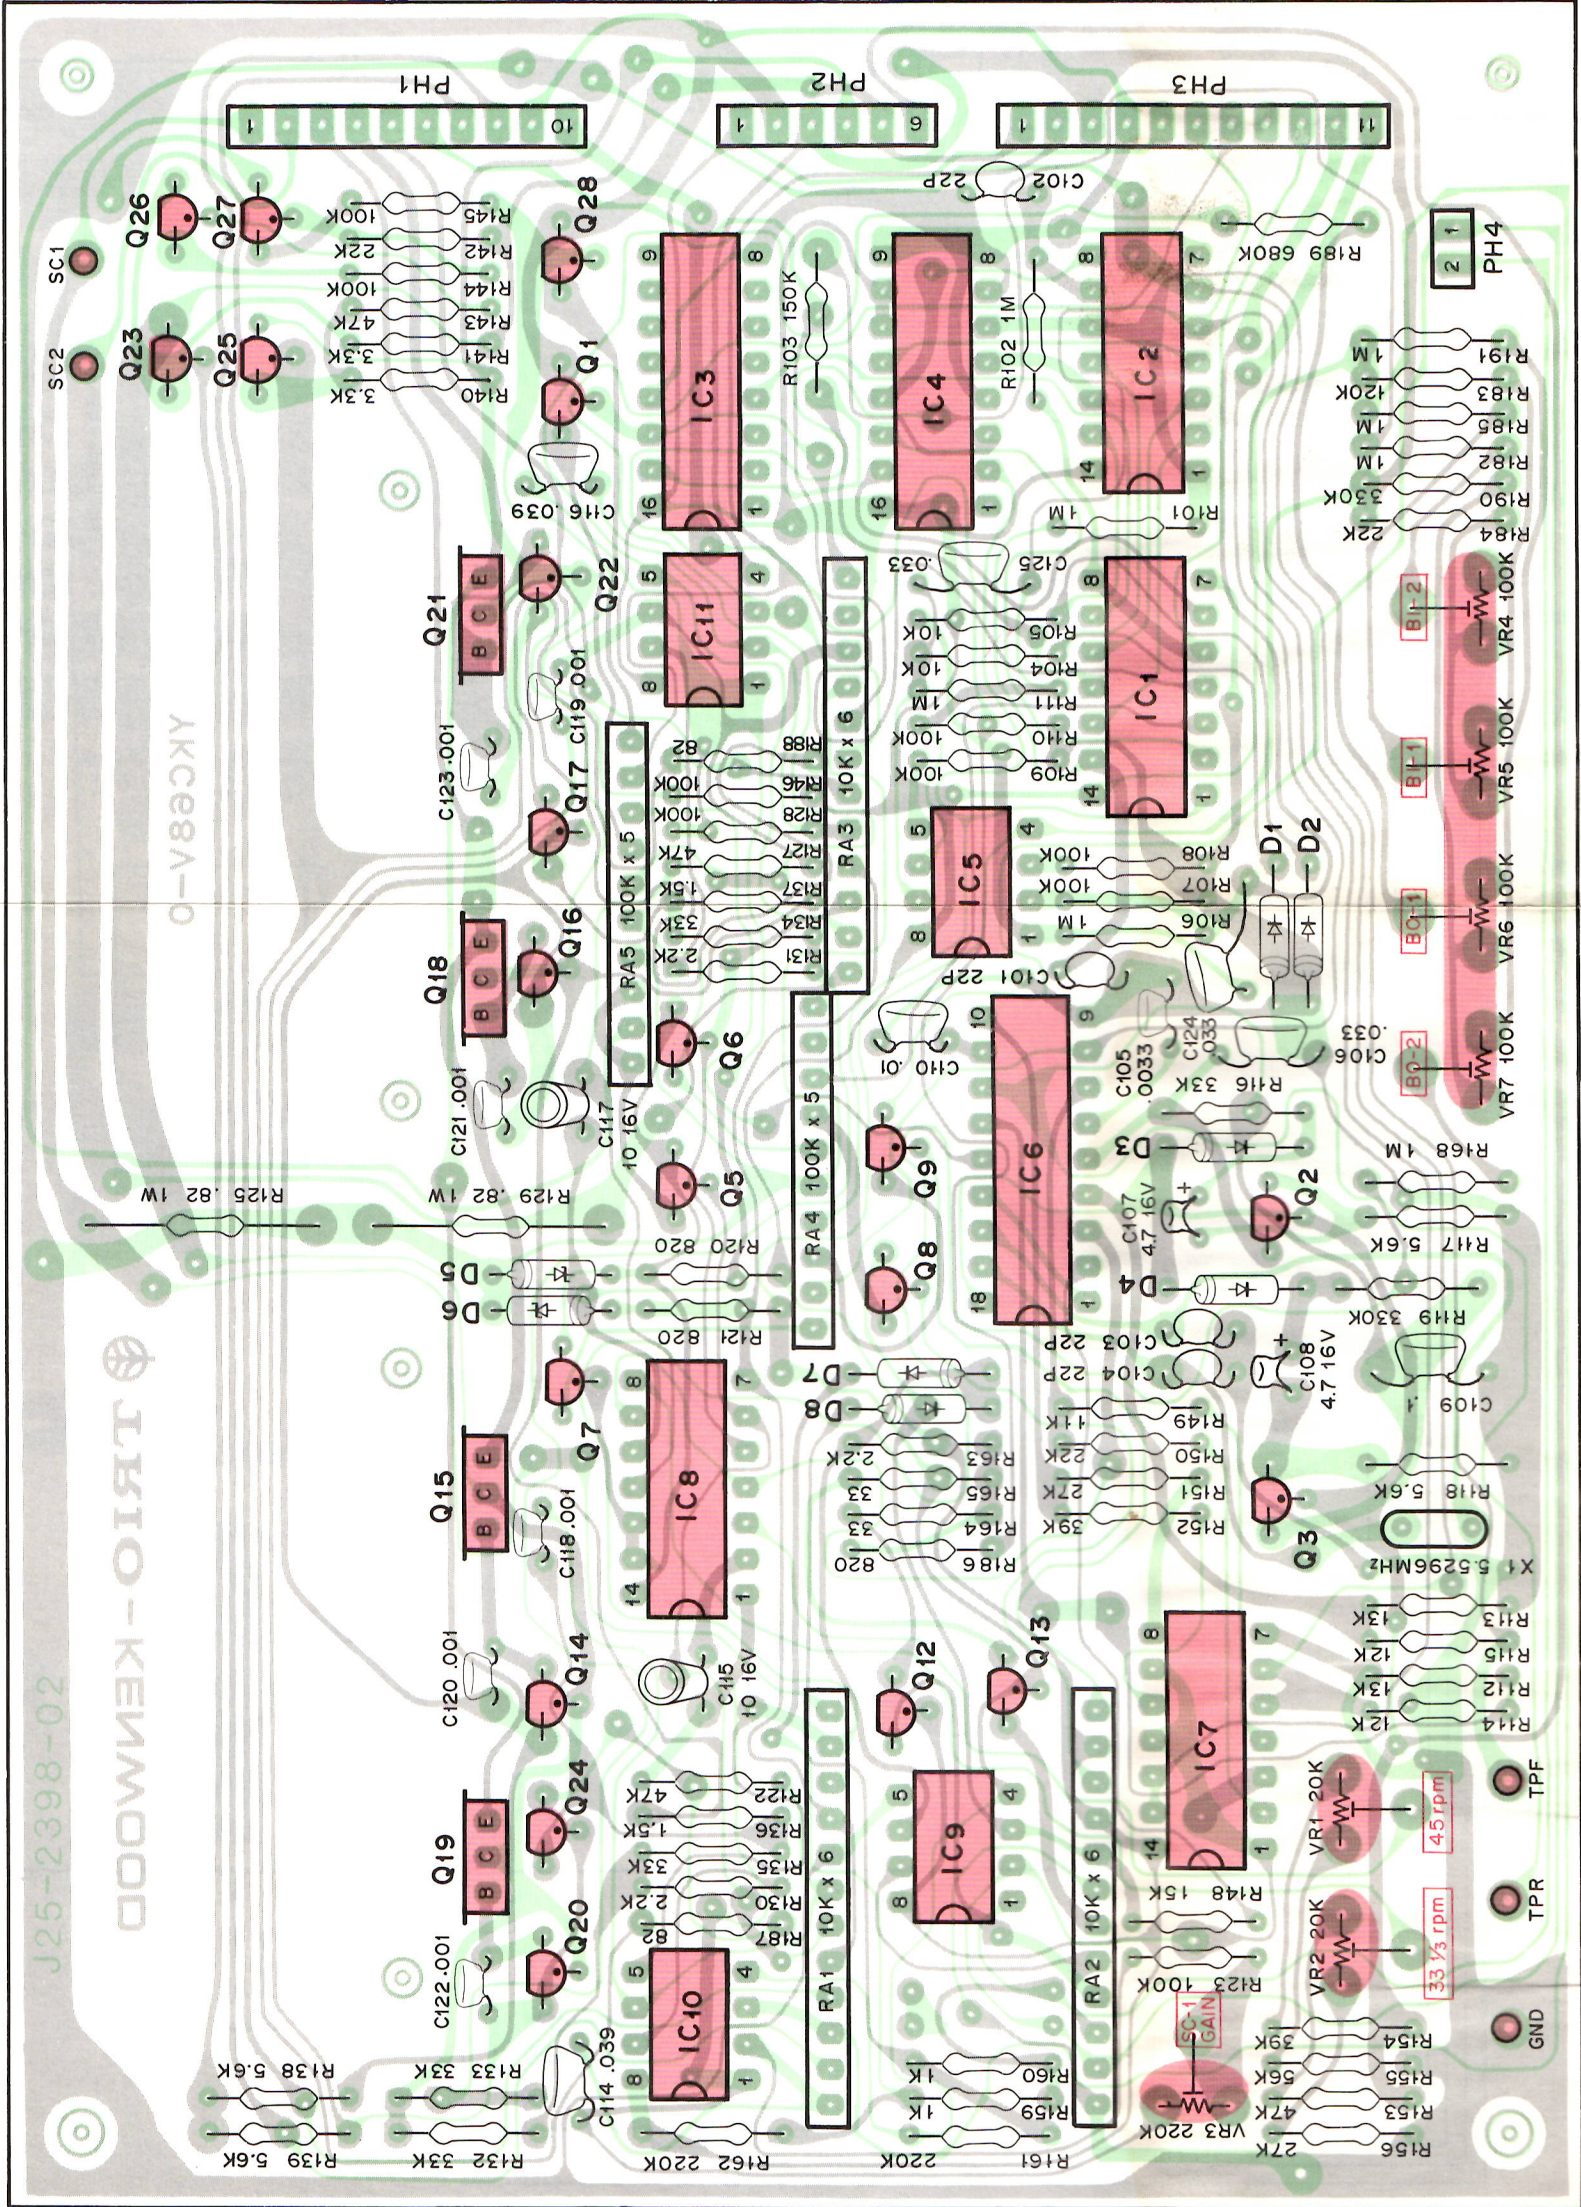

IC1: CD4001BCN or 4001BPC or CD4001BE or MC14001BCP
IC2: CD40106BCN or 40106BPC or CD40106BE
IC3: CD4022BCN or 4022BPC or CD4022BE or MC14022BCP
IC4: CD4027BCN or 4027BPC or CD4027BE or MC14027BCP
IC5: 8: CD4066BCN or 4066BPC or CD4066BE or MC14066BCP
IC6: MSM5819RS
IC7: 8: CD4066BCN or 4066BPC or CD4066BE or MC14066BCP
IC8: 8: CD4066BCN or 4066BPC or CD4066BE or MC14066BCP
IC9: 8: CD4066BCN or 4066BPC or CD4066BE or MC14066BCP
IC10: 8: CD4066BCN or 4066BPC or CD4066BE or MC14066BCP
IC11: 8: CD4066BCN or 4066BPC or CD4066BE or MC14066BCP
Q1~3,8,9,12,14,17,20,24,25,27,28: 2SC945(Q,P)
Q5~7,13,16,22,23,26: 2SA733A(Q,P)
Q15,19: 2SD586(R,Q)
D1~4,7,8: 1N60
VR1,2: 2SD586(R,Q)
VR3: 2SD586(R,Q)
VR4,5: 2SD586(R,Q)
VR6,7: 2SD586(R,Q)
VR8: 2SD586(R,Q)
D5,6: YZ-058